


Fitting

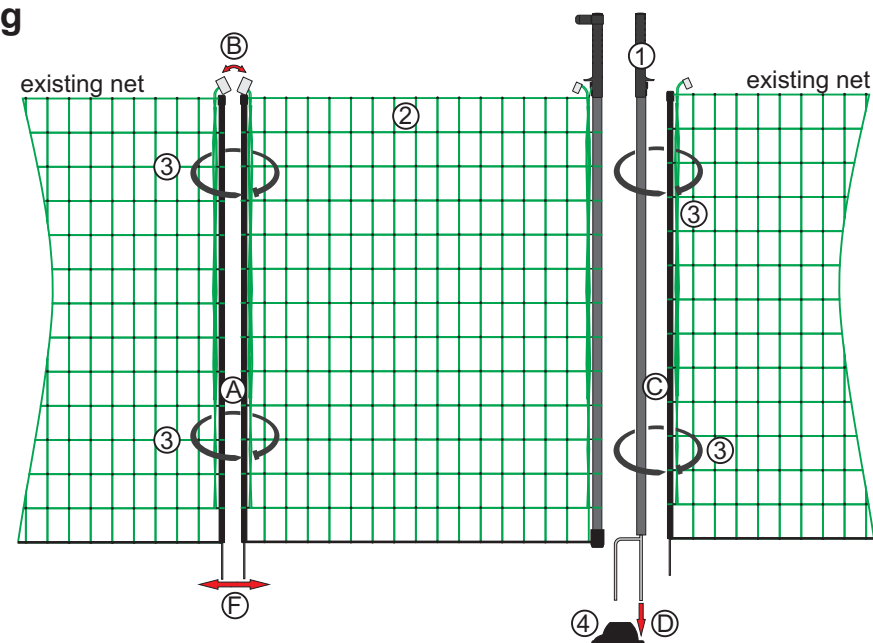

Assembly

Before you install the gate system you will need to fit the handle (A) to the terminal post (1). If the post has a cap (B), remove it. The easiest way to do this is insert a skewer or screwdriver through the hole in the cap and twist it off. In the base of the handle is metal thread, screw this down into centre of the post. It is tight, but this is so you can adjust the height of the handle without fear of it coming off if screwed in a minimal amount.

Installation

Insert the thinner diameter post of the gate section into the ground next to one of the end posts of the existing netting. With the enclosed tie wraps secure the two together (A). Clip the two stainless clips together (B). Insert the terminal post into the ground next to the other end post (C) securing the dock to the ground with the central spike (D) and skewers (the tread-in 'h'spike should be perpendicular to the line of the gate). Secure with the two posts together with the tie wraps. Dock the gate post (with the handle and without spike) into the dock and clip the handles together (E). If needed, adjust the ground position of the 'hinge' posts (F) to ensure the gate post will dock freely without excessive tension.

Use

